


Installation



Print the template (A) fullsize on your home printer
Cut both parts and tape these parts together.
Tape the template on top shell and mark the holes.
Drill the holes with a 5mm drill.
Apply backrest (B) and secure them with the 2 screws (C) from the inside

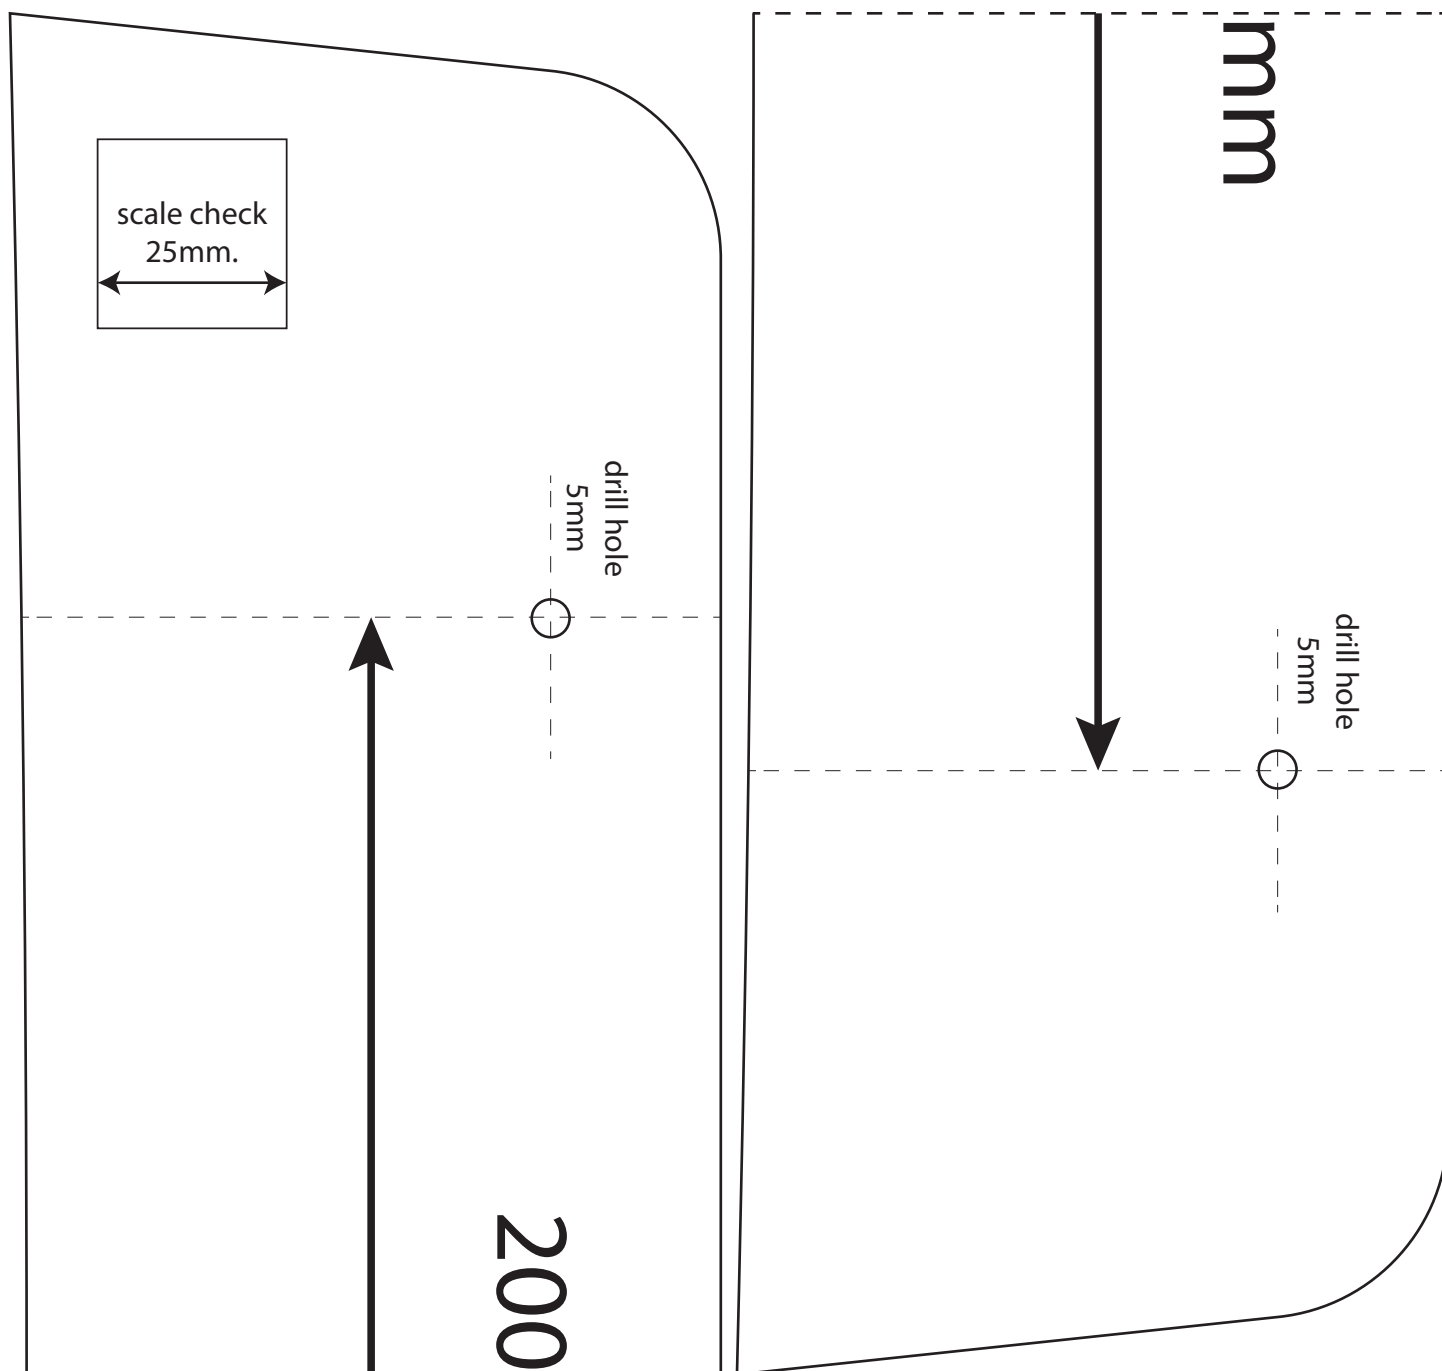